


# Pneumatic RO Element Removal Procedure

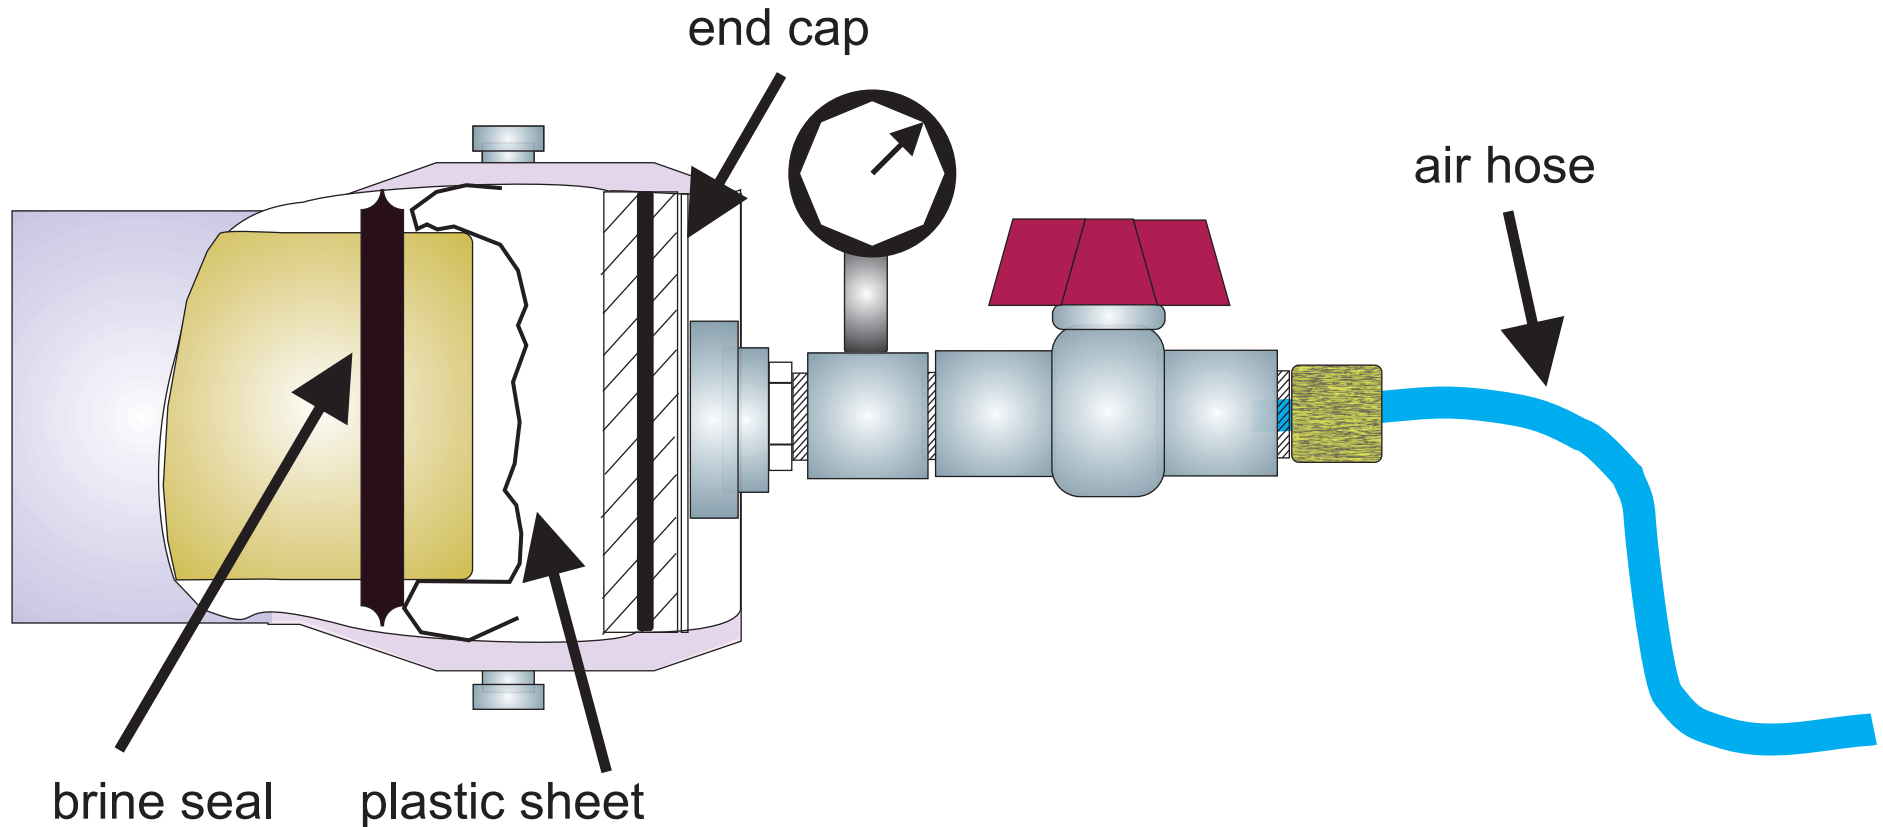

## Pneumatic Element Removal Procedure

1. Cut out circular sheet of plastic(.02mm or thicker) twice the diameter of the elements
2. Remove end cap and permeate tube from the lead element
3. Place circular plastic sheet over face of the element , Stuff excess around the edges of the element
4. Fit end cap to adapt to air hose quick connect; include a pressure guage with the endcap fittings.
5. Remove lag element end cap; Replace lead element endcap (with air hose fittings); install air hose.
6. Gradually increase air pressure until the entire train of elements begins to move.
7. One person can remove elements as another controls the air pressure

